


5.9 Optical Drive

Optical Drive Spare Part Number Information


DVD/CD-RW Combo Drive	417060-001
DVD±RW/R and CD-RW Double-Layer Combo Drive	417061-001
DVD±RW/R and CD-RW Double-Layer Combo Drive with LightScribe	417062-001

1. Prepare the computer for disassembly ([Section 5.3](#)).
2. Remove the Phillips PM2.5×7.0 screw ❶ that secures the optical drive to the computer.
3. Insert a thin tool, such as a paper clip, into the media tray release hole ❷. (The optical drive media tray releases from the optical drive.)
4. Use the media tray frame to slide the optical drive ❸ to the left.
5. Remove the optical drive.

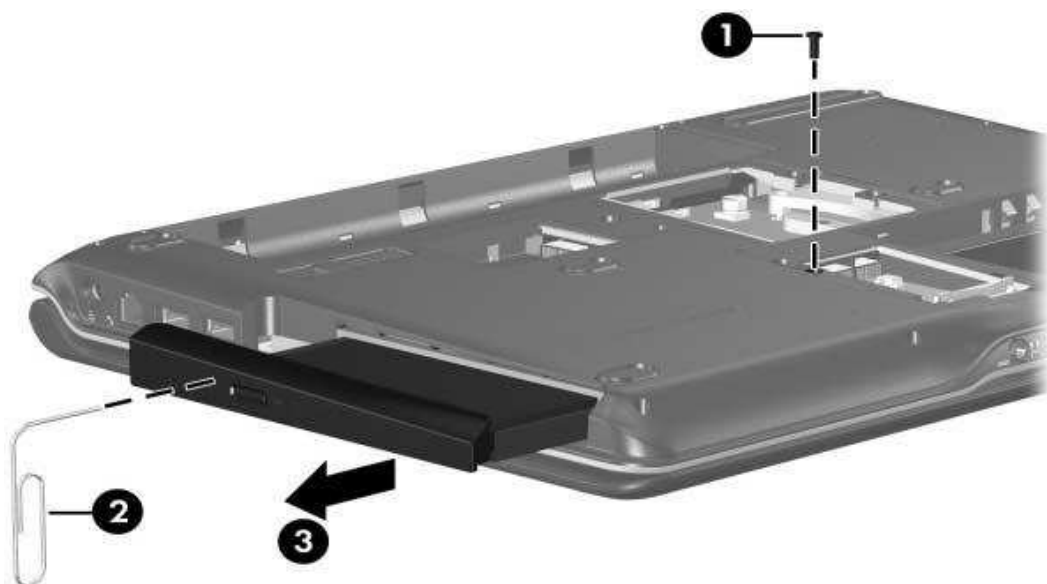

Removing the Optical Drive

6. Position the optical drive with the optical drive bracket toward you.
7. Remove the two Phillips PM2.0×3.0 screws ❶ that secure the optical drive bracket to the optical drive.
8. Remove the optical drive ❷.

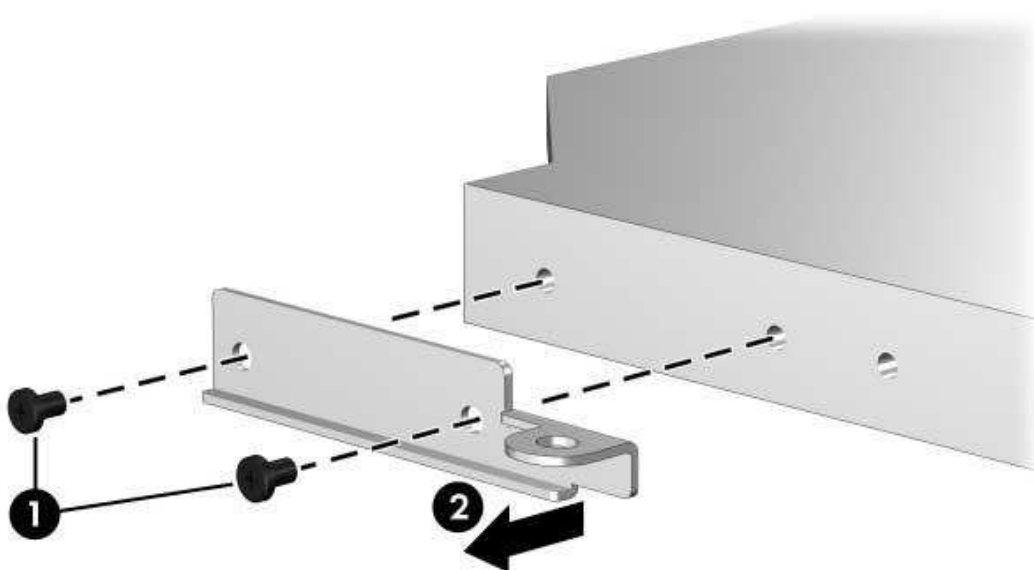

Removing the Optical Drive Bracket

Reverse the above procedure to reassemble and install the optical drive.